



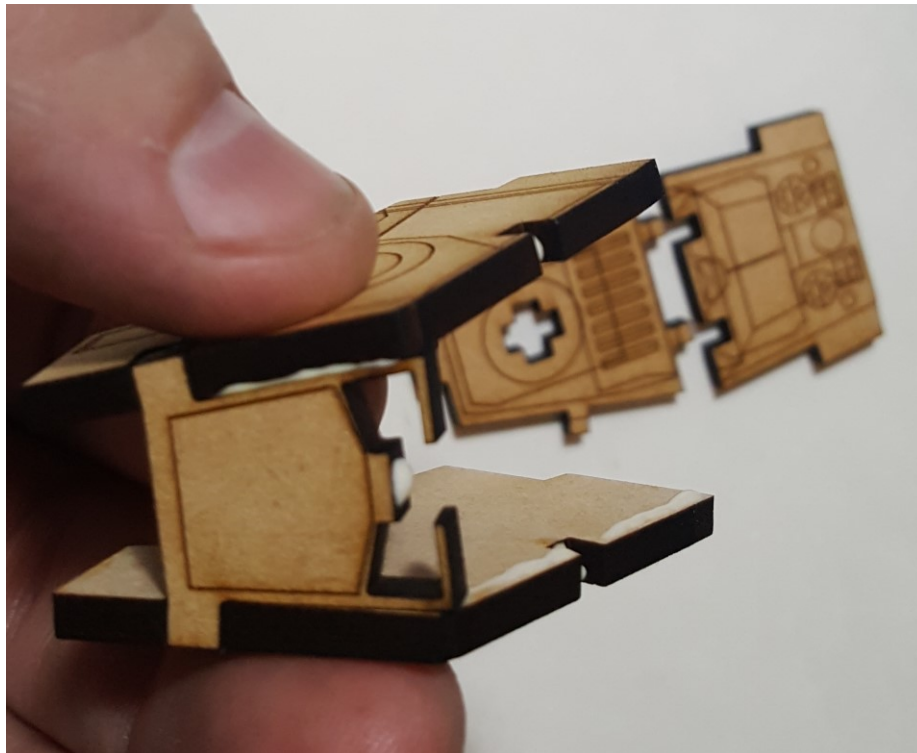
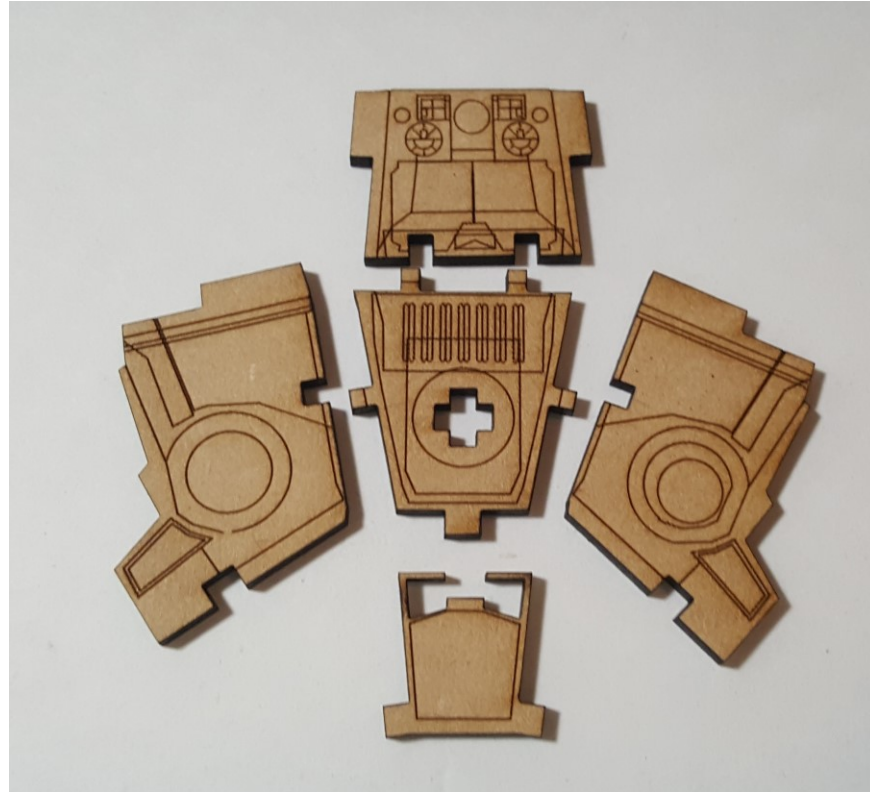
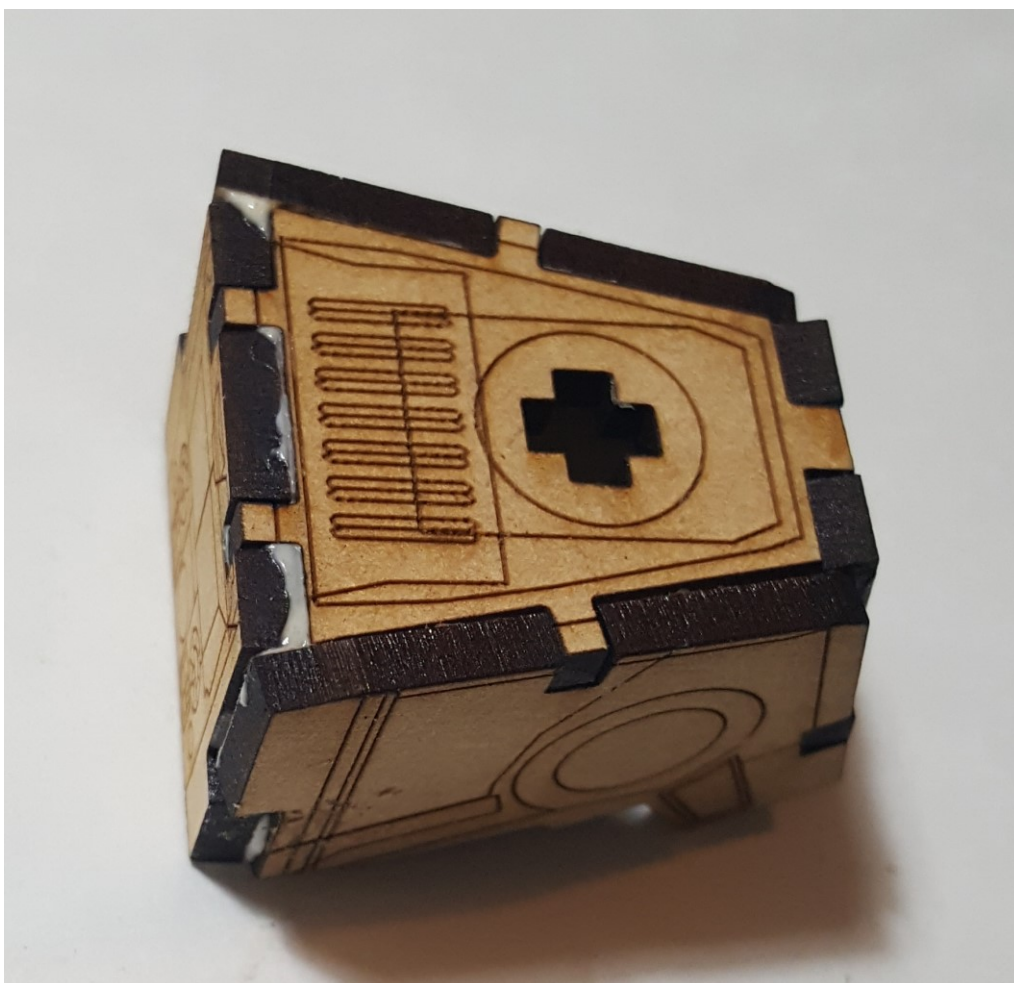
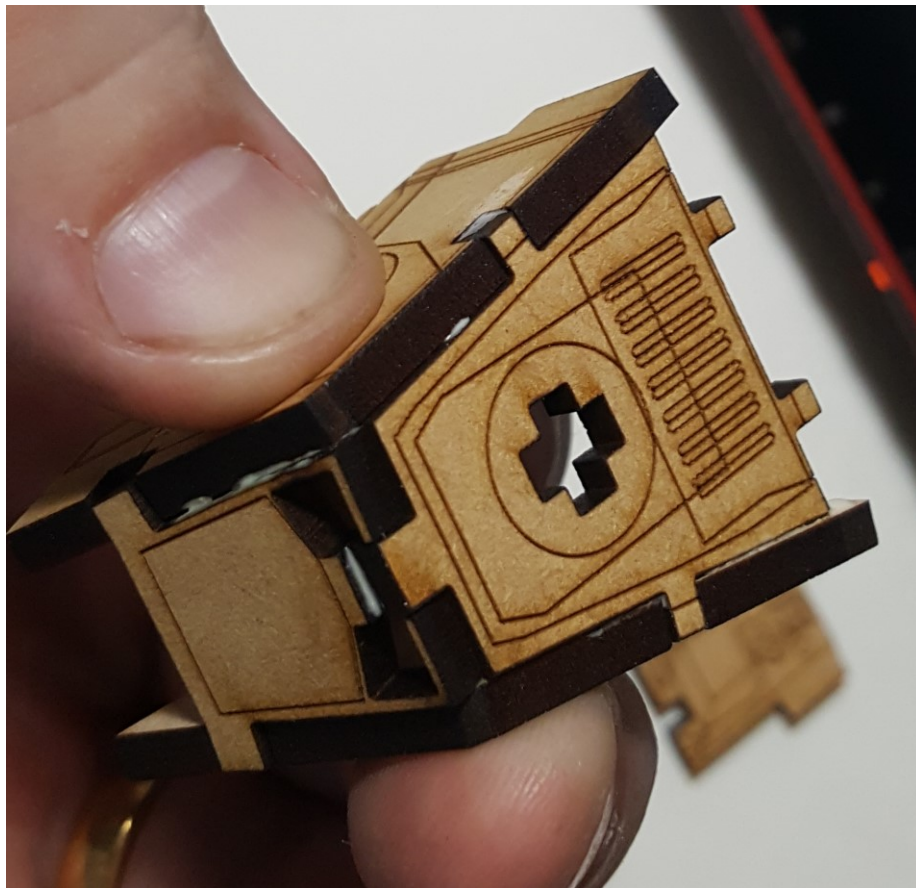


AT-ST Walker

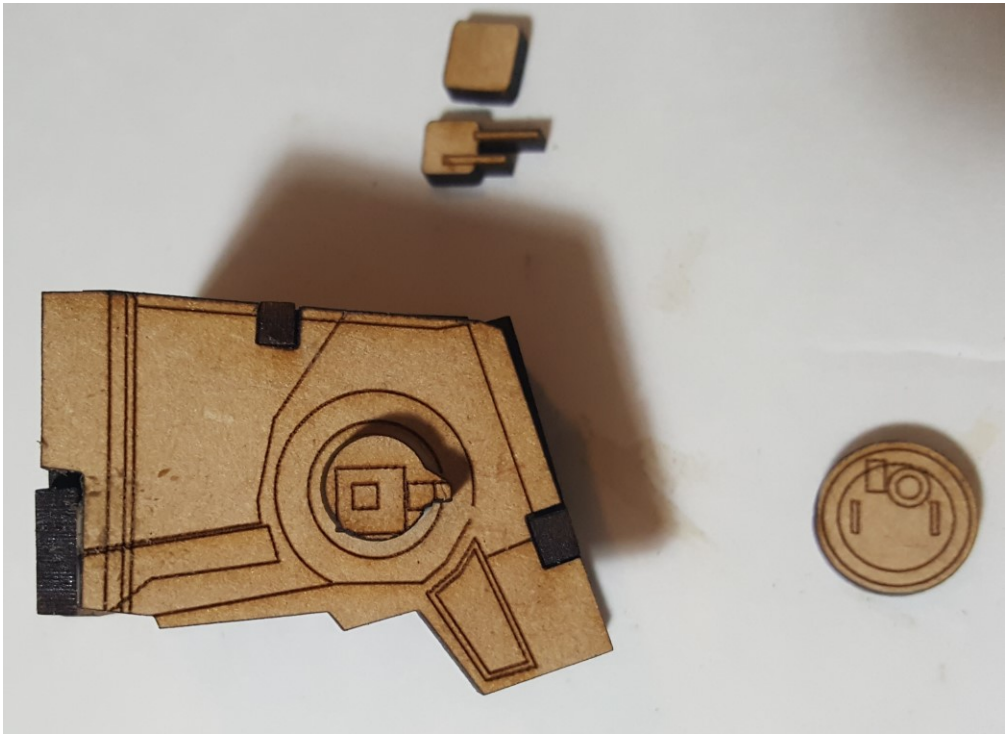

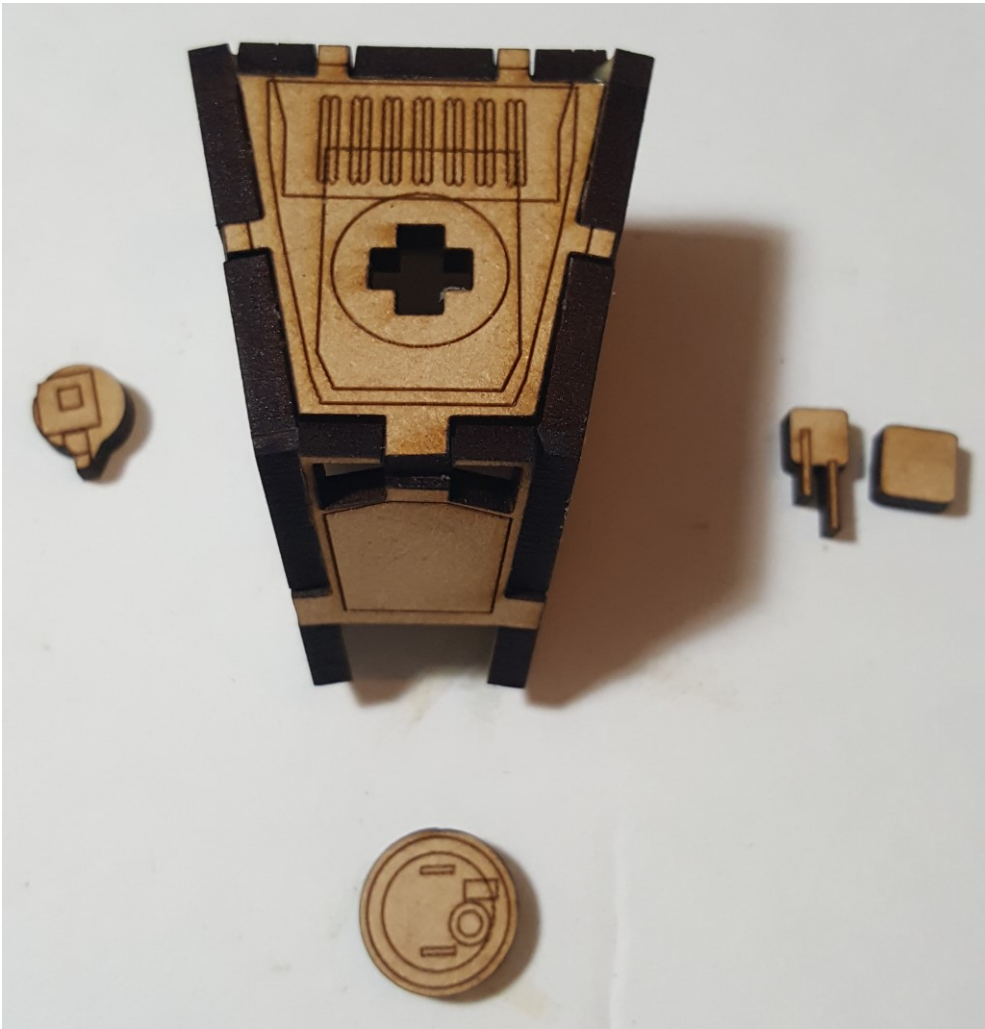

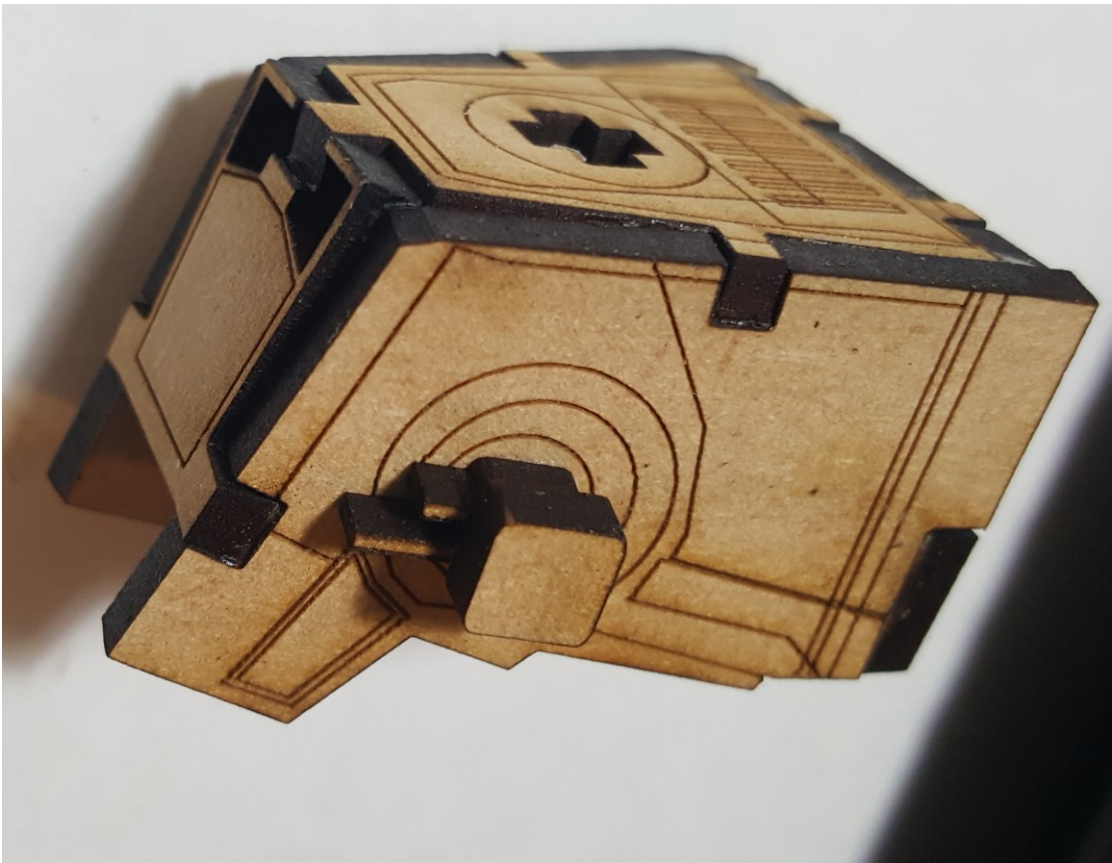

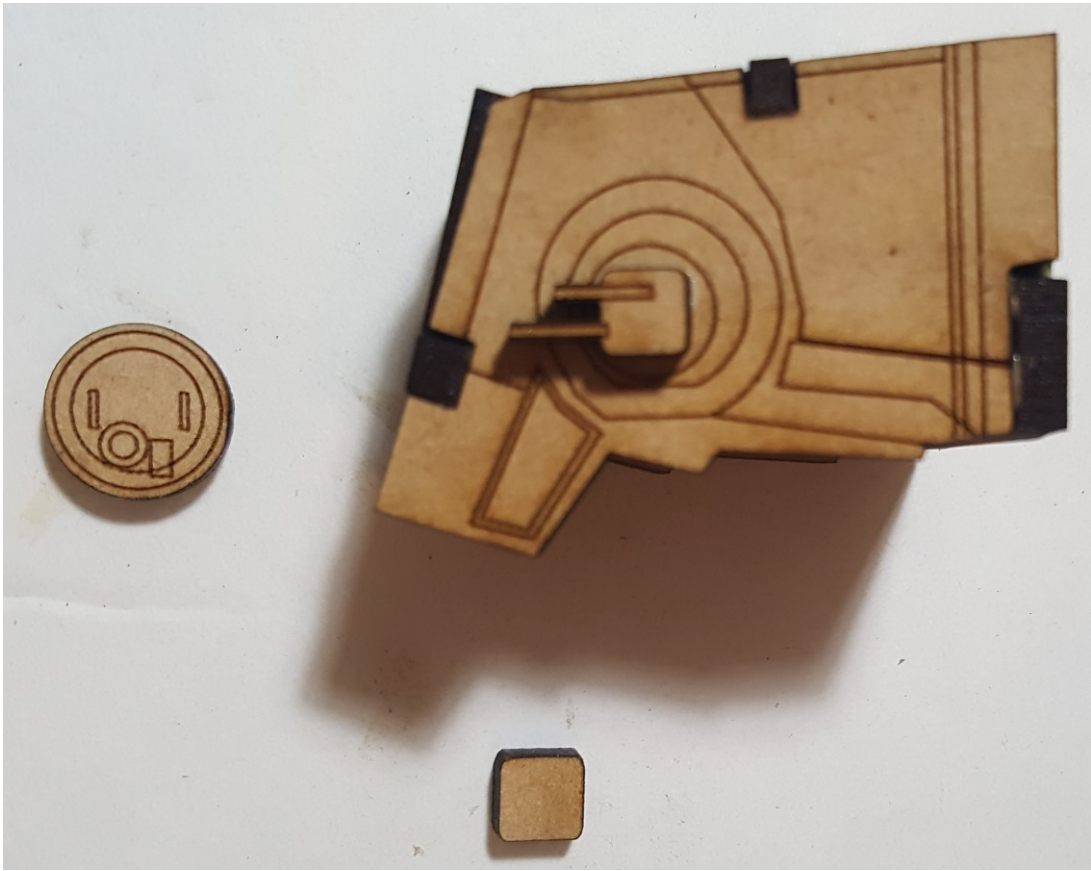









You'll need to sand the inside edges so that the nose gun can fit. Sand a little on both sides. Sand just a little at a time and check the fit often.






It probably won't be a perfect fit so use a lot of glue.





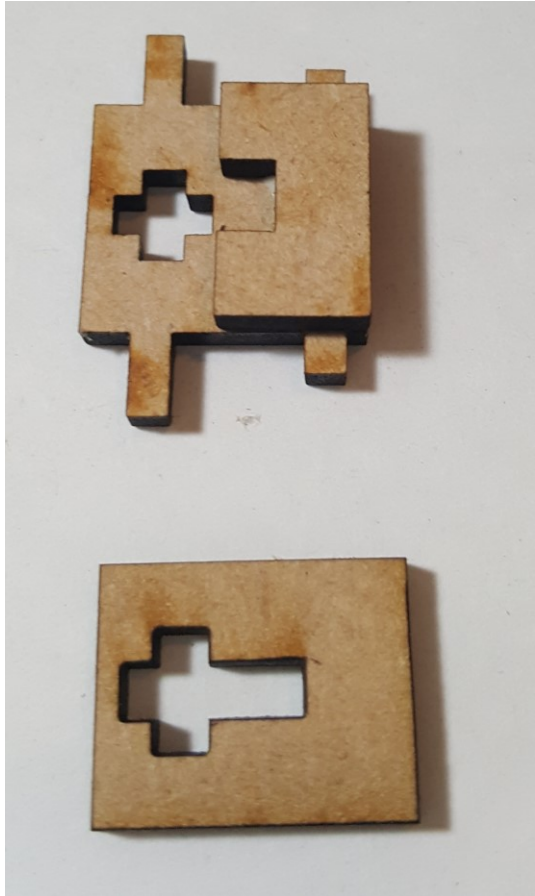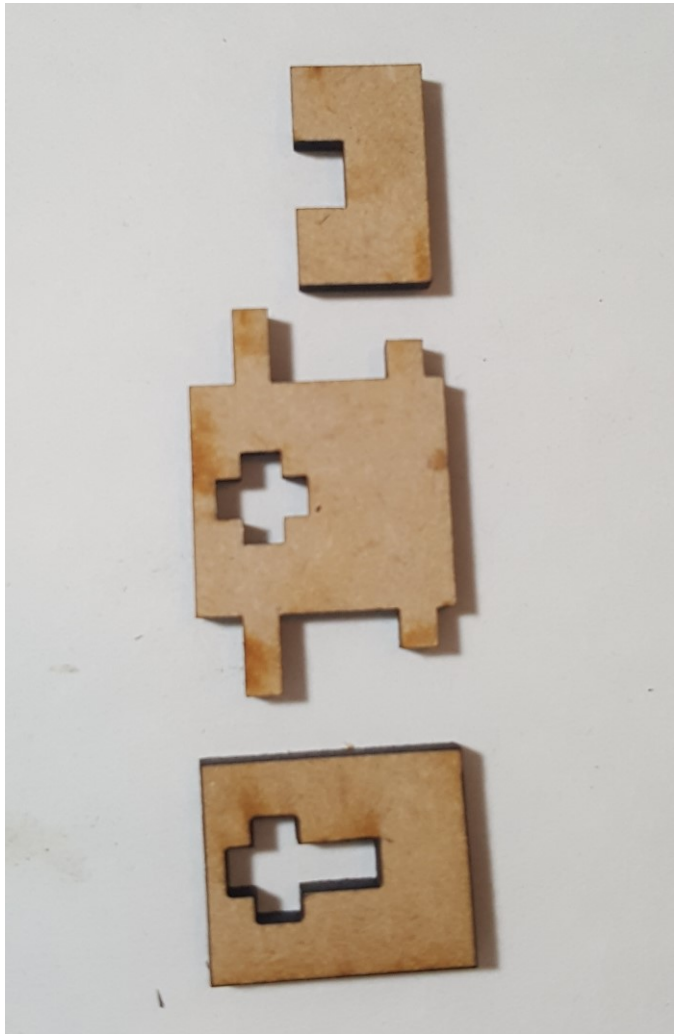

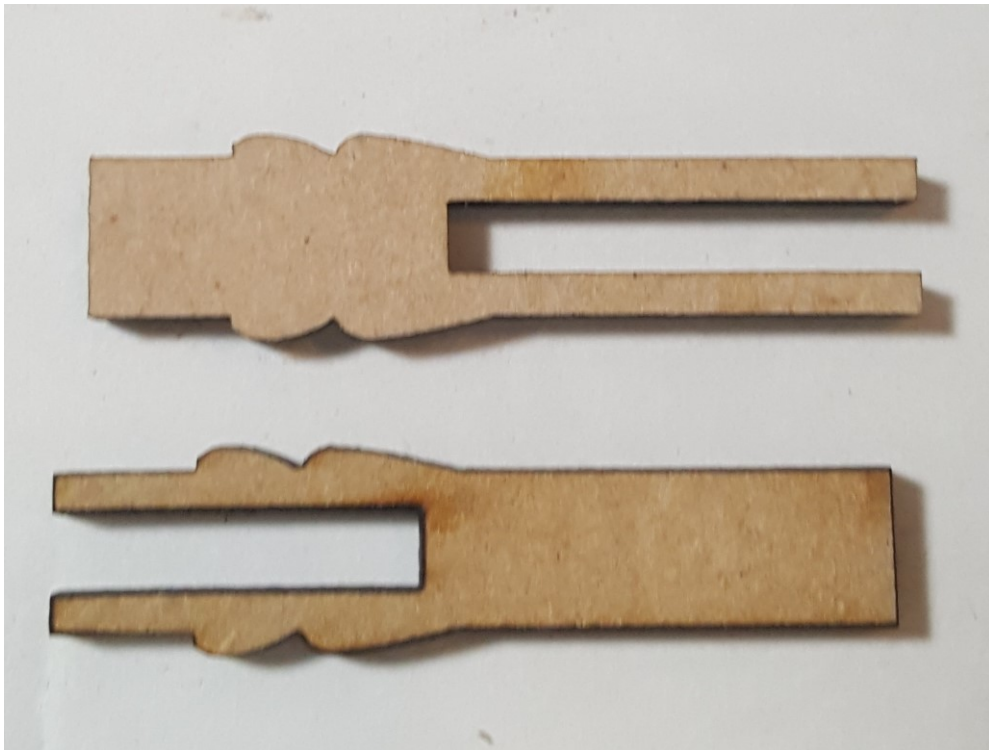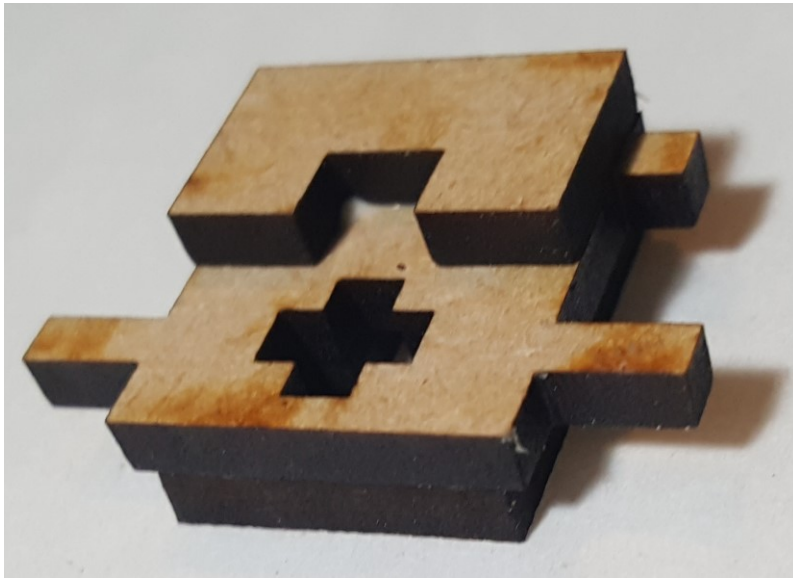

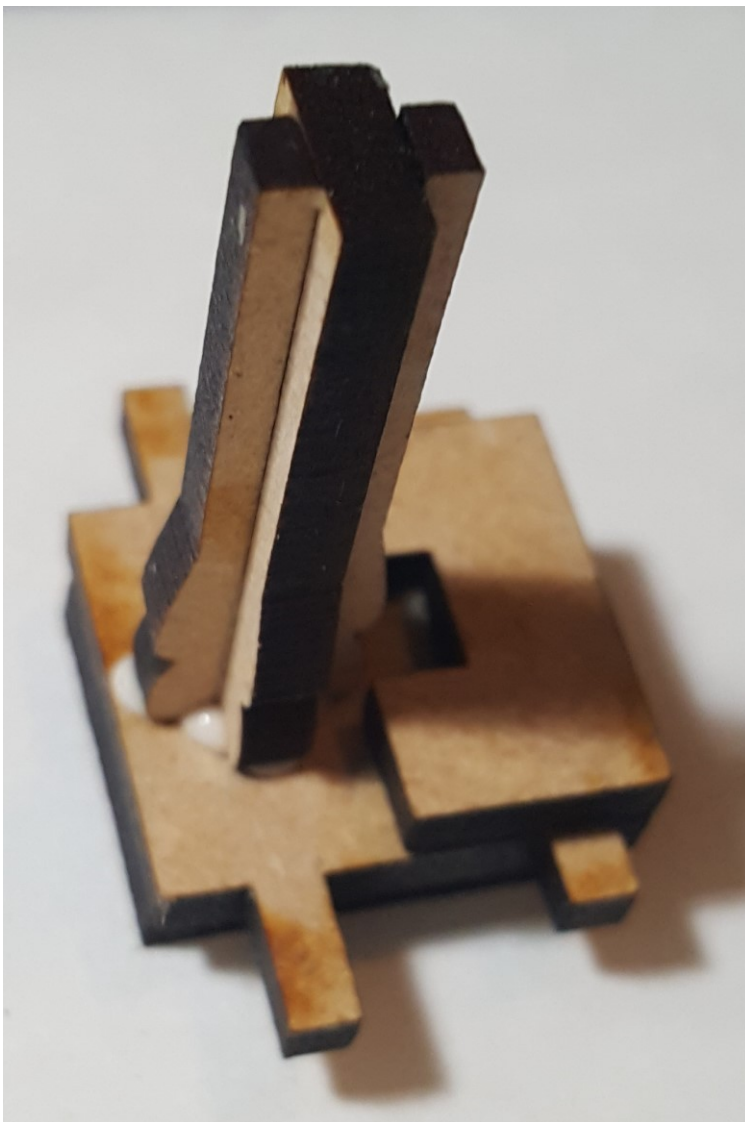

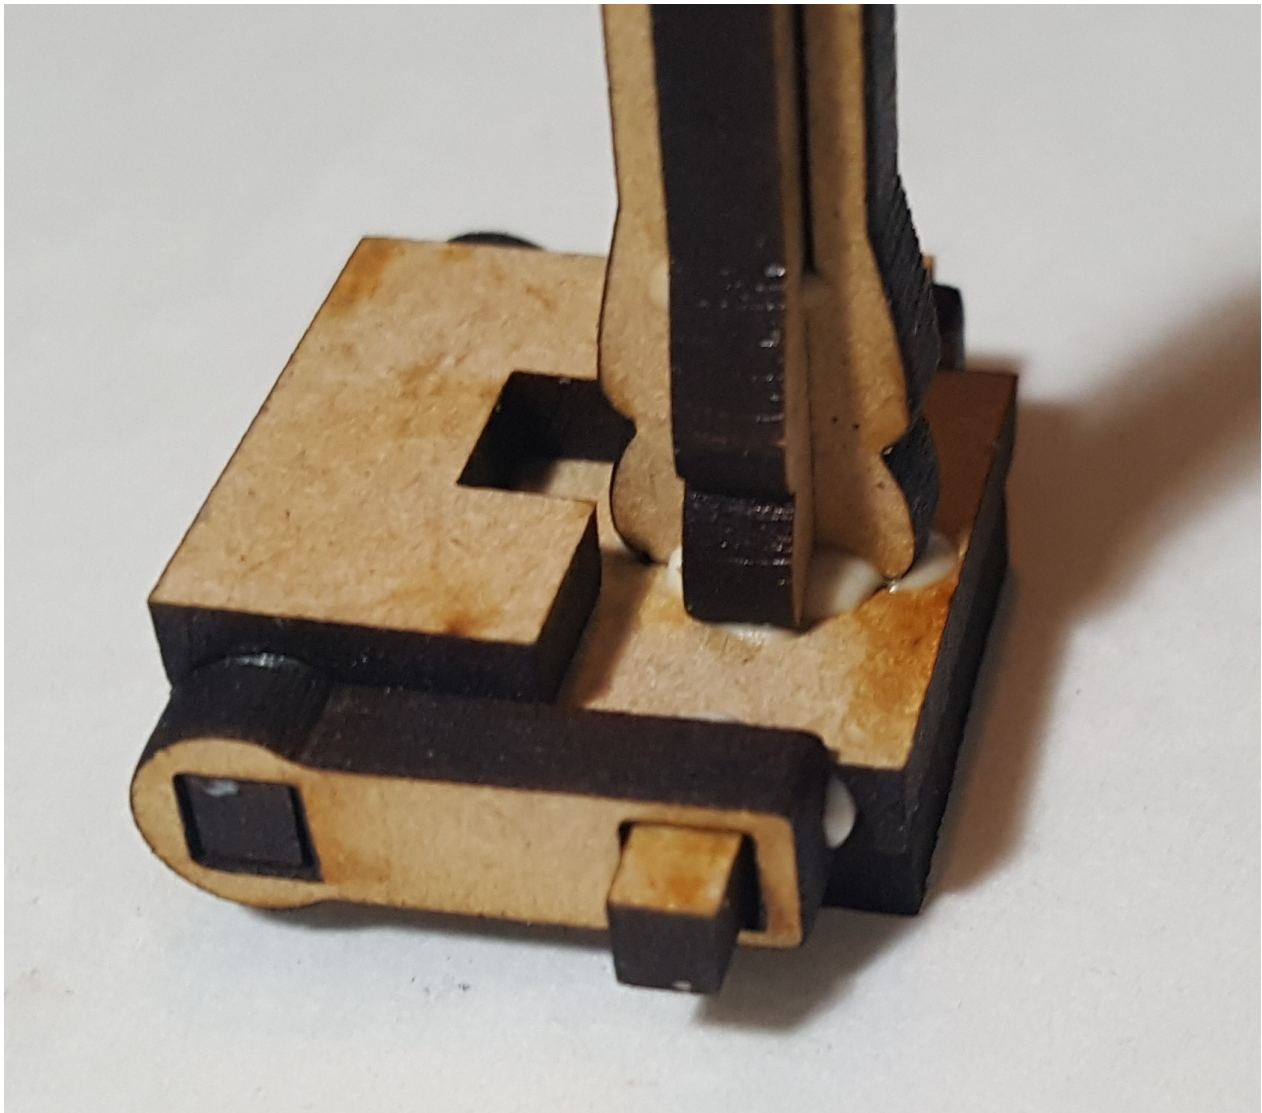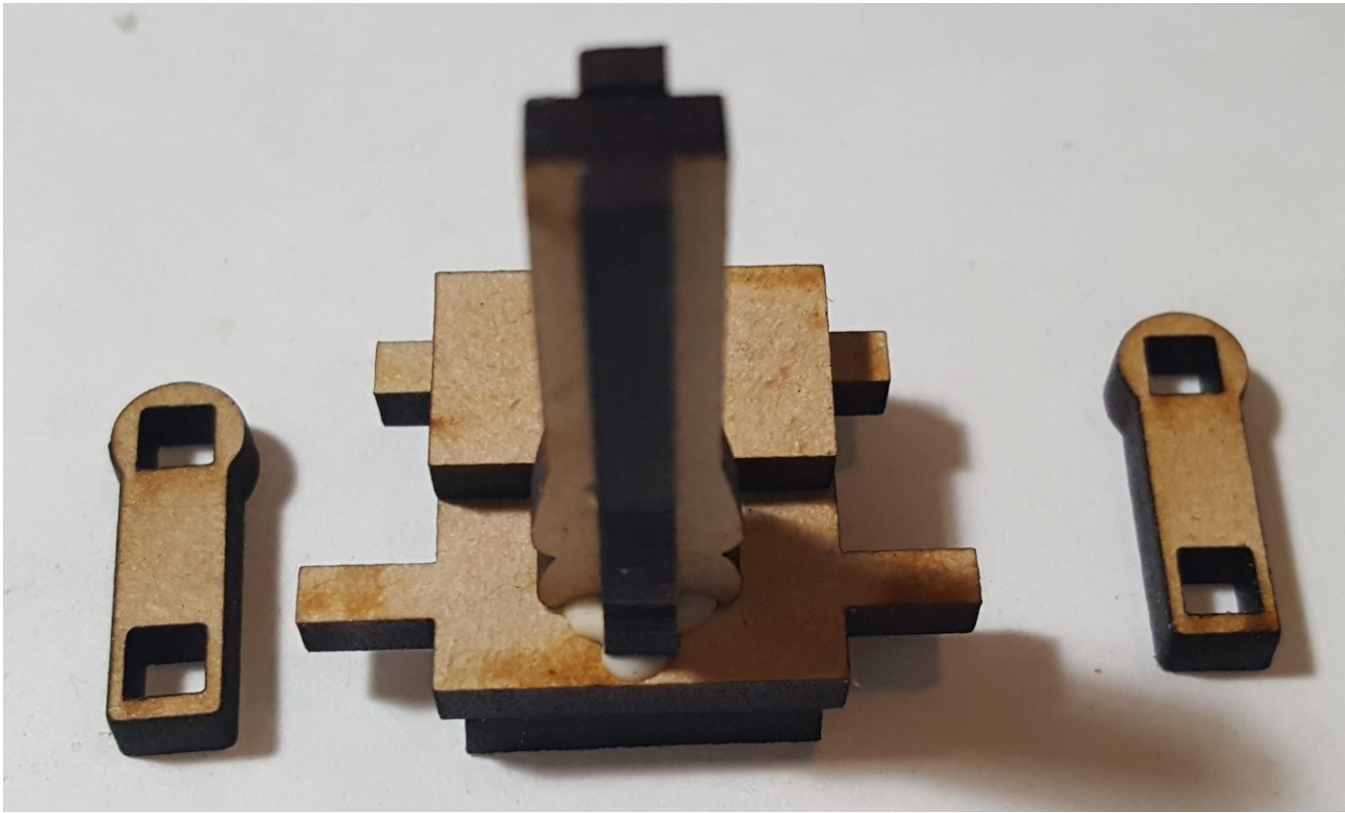

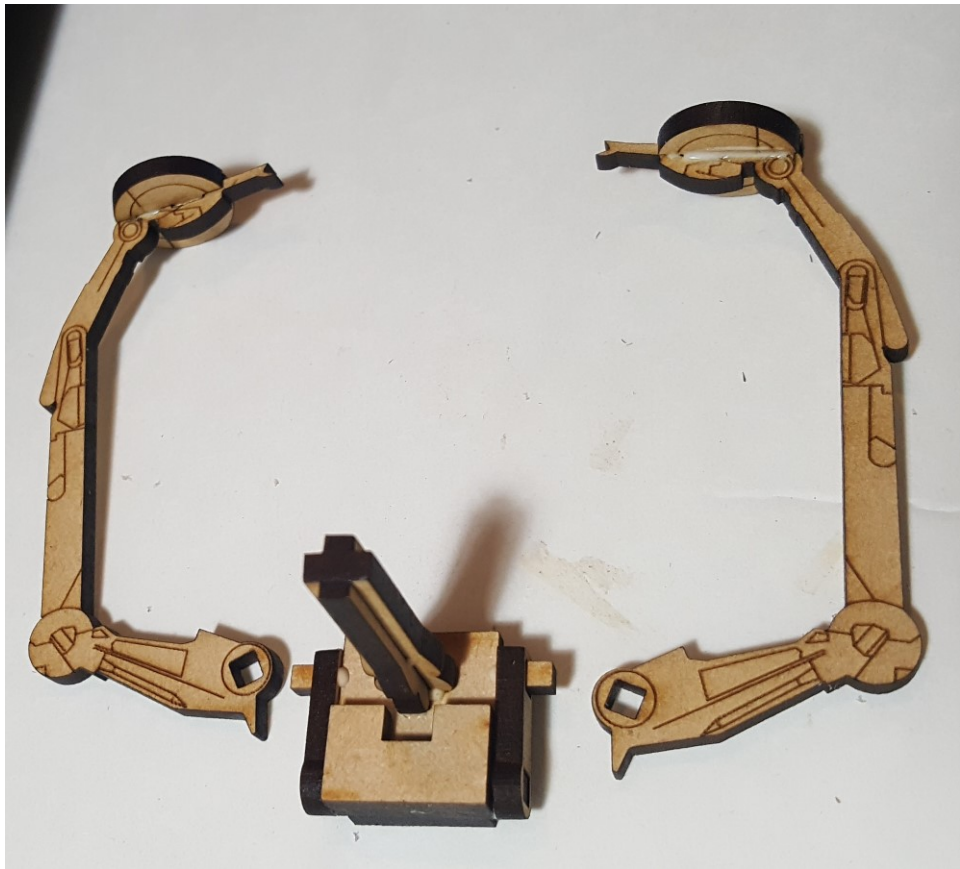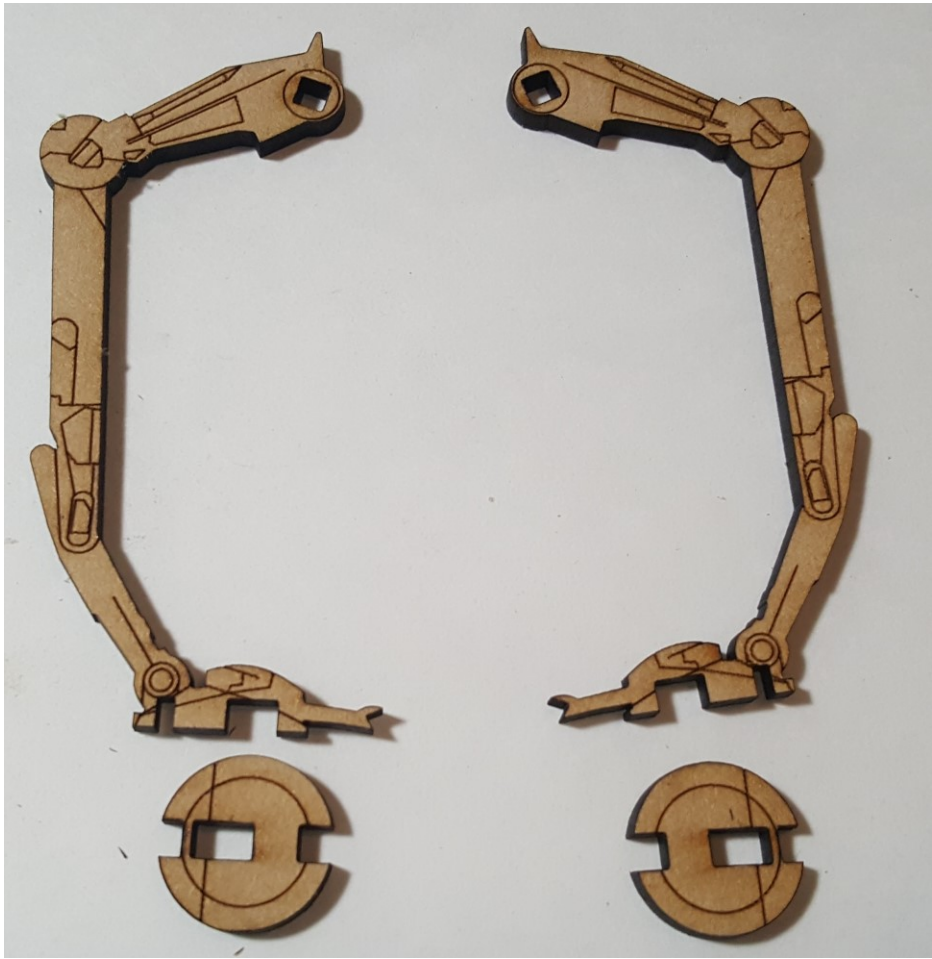









Now you can glue the head onto the neck. You don't have to glue the walker to the stand. It should fit snugly and will allow you to remove it.

